



## Technical Guide TGAV

### Configuring/Adding BFR to Software


Select **Tools**, then **Device Discovery**

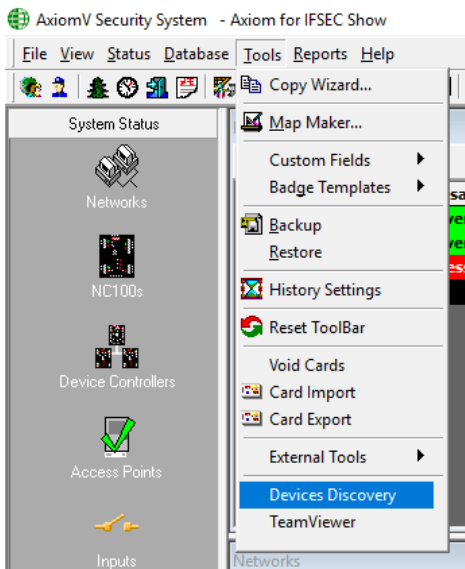


Click **Search**

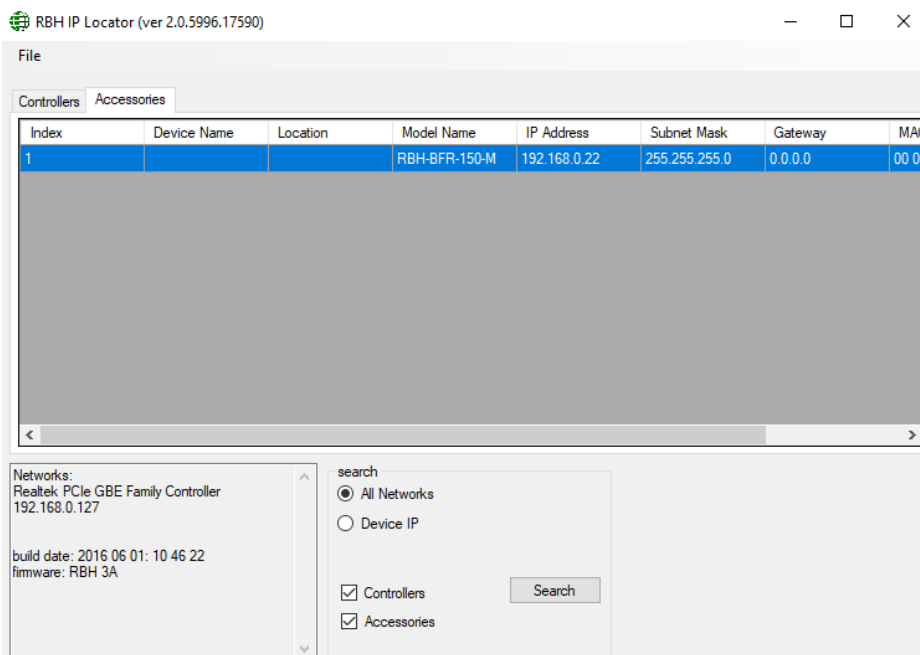

Go to the **Accessories** tab and then click **Connect**

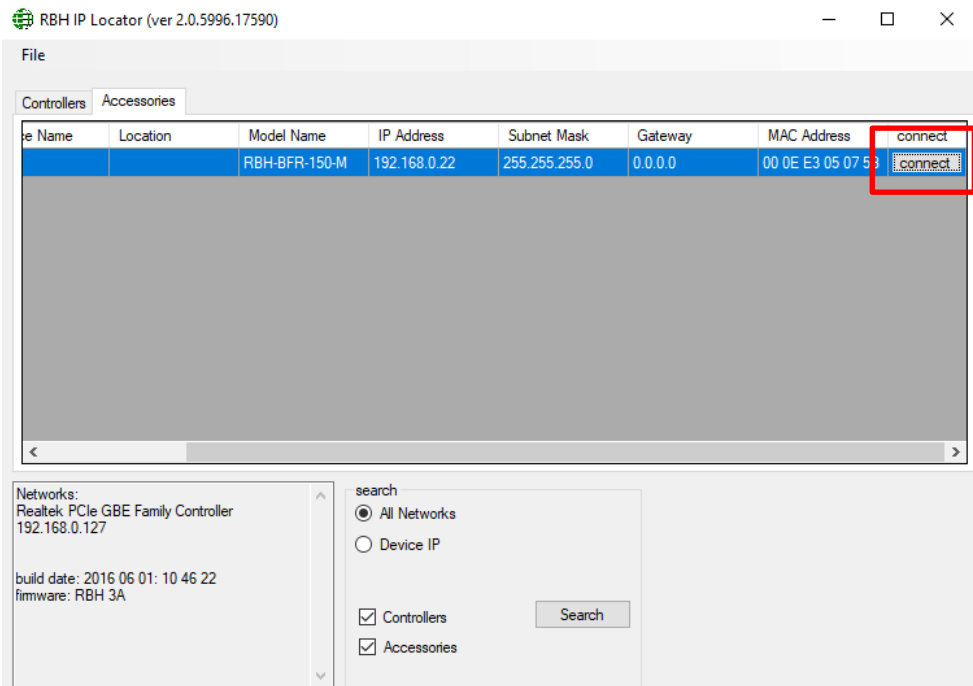


You will then be taken to the BFR's configuration URL.

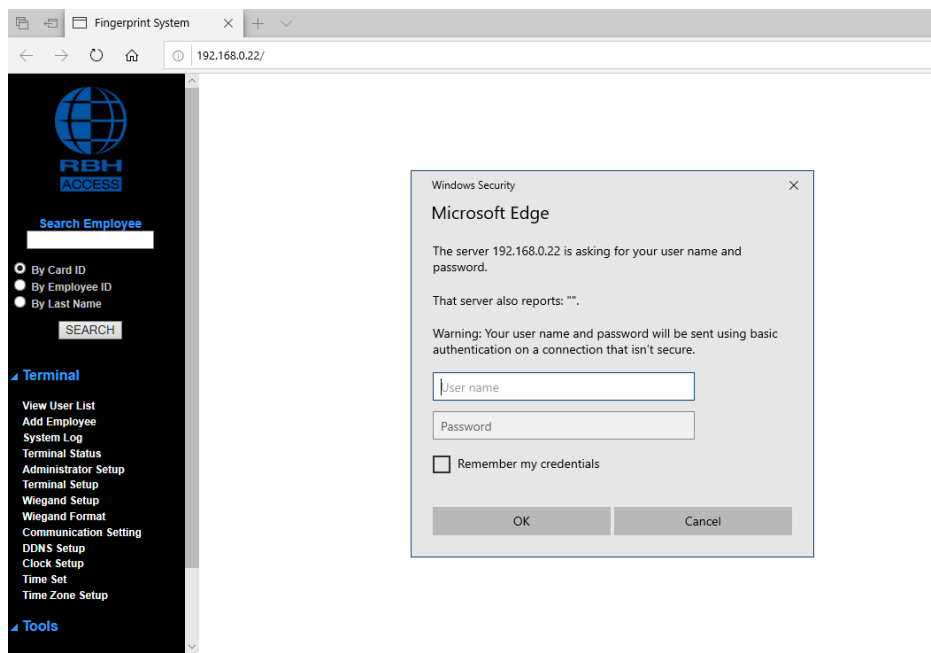

Username: RBH (all uppercase)  
Password: password (all lowercase)

Once you have entered, go to **Communication Setting**

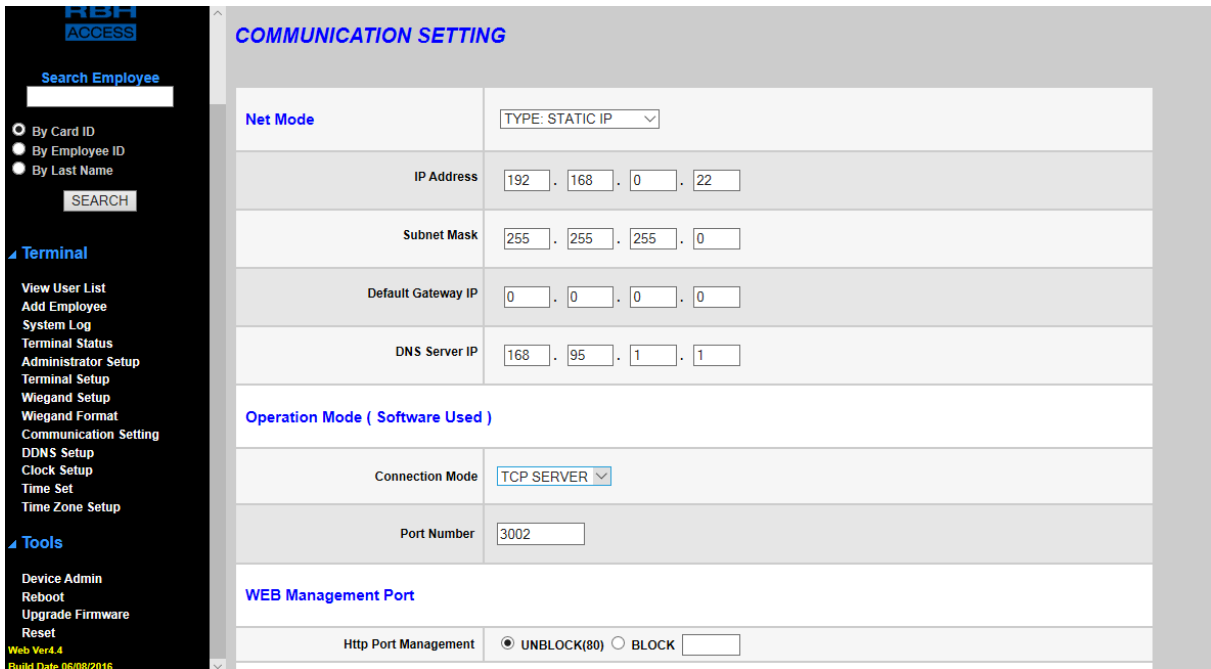

**COMMUNICATION SETTING**

**Net Mode** TYPE: STATIC IP

IP Address 192 . 168 . 0 . 22

Subnet Mask 255 . 255 . 255 . 0

Default Gateway IP 0 . 0 . 0 . 0

DNS Server IP 168 . 95 . 1 . 1

**Operation Mode ( Software Used )**

Connection Mode TCP SERVER


Port Number 3002

**WEB Management Port**

Http Port Management  UNBLOCK(80)  BLOCK

On this page you will be able to configure your communication settings. When all your comms. Information has been entered; you can click **Save** at the bottom of the page.

Go to Axiom V software and select **Databases** and then click **Fingerprint readers**.

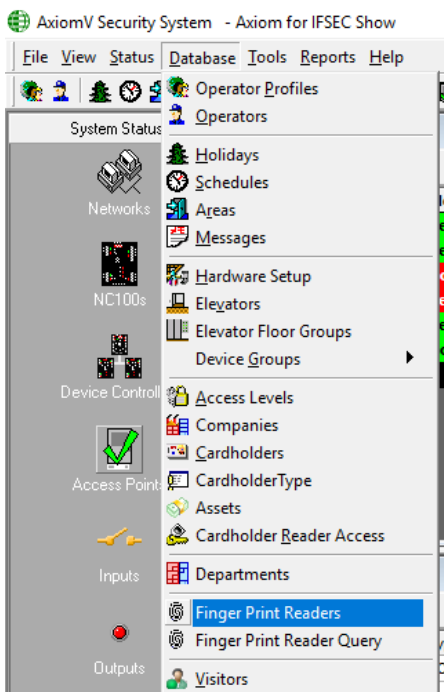


Click on **New**



No devices configured. Click on the [New] button to configure a new device

At this stage, you will need to enter the following; Description, Terminal ID, IP Address (The IP address you entered into the BFR communication settings), Port Number and then the reader position. See below for an example.

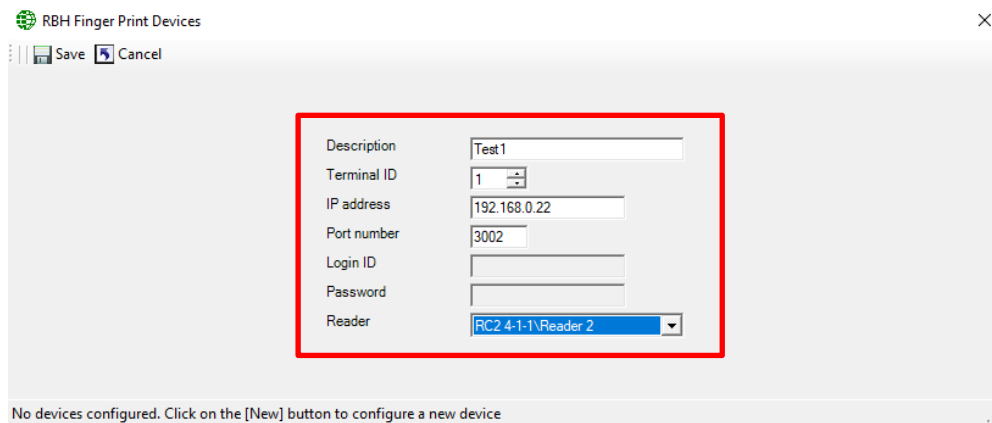

After you have finished entering all the information needed, you can click **Save**.

You can now start enrolling fingerprints onto your Biometric fingerprint reader. For information on how to enroll fingerprints, please see tech document, ***Enrolling on BFR's***